



AirDryer

Owners Manual



Please read these instructions carefully before operating the AirDryer.

Record in the space below the SERIAL NO. found on the nameplate on your AirDryer and retain this information for future reference.


SERIAL NO.

PRODUCT CODE : DAD25

Table of Contents	Page
Page	4
2 Specification	4
2 Important Safety Instructions	4
2 Before you begin using the AirDryer	4
3 Using your AirDryer	5
3 How long does it take to Dry the Laundry	
	Cleaning Your AirDryer
	At the end of appliance life
	Hints before returning the appliance
	After Sales Service
	Quick Start Guide

Specification

Power Input (Power Supply)	230-240V~50Hz
Power Output (Power Supply)	12VDC—25W
Outside Dimensions:	50mm(H)×600mm(W)×700mm(D)
Net Weight:	Approx. 5 kg

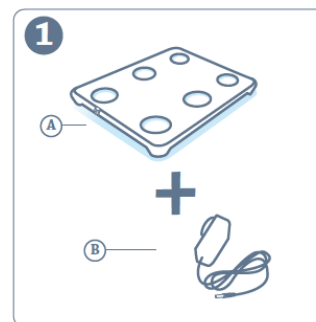

Important Safety Instructions

Each unit has been manufactured to ensure safety and reliability. Before first use, read the instructions carefully and keep them for further reference. When using any electrical appliance basic precautions should be followed. Please read the following instructions as they are for your benefit and safety. Should the appliance be sold or transferred to another owner, ensure that the instruction leaflet is left with the appliance in order that the new owner can get to know the function of the appliance and



Before you begin using the AirDryer.

Please ensure the following




1. The appliance requires no installation; it should be used solely as a portable appliance.
2. Mains operated portable appliances are not suitable for use in a bathroom.
3. Ensure that you use the power supply provided with the unit.
4. Connect only to a single-phase socket with a mains voltage as specified on the rating plate.
5. Always unplug the Power Supply from the Wall Socket when not in use.
6. Keep the air inlets and outlets free of any obstructions
7. Do not use the appliance in rooms less than 8m² area.
8. Do not immerse the AirDryer in water or allow for water to come into contact with the power socket
9. Close supervision is required when any appliance is used near or by children. Do not let animals or children touch or play with the AirDryer.
10. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
11. This appliance is intended for indoor, household use only. Never to be used outdoors
12. Do not use the appliance for other than its intended use as described in this instruction book.
13. If the power supply or cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person must replace it in order to avoid a hazard. Please check rating labels
14. Never allow the cord to touch wet or hot surfaces or to become twisted.
15. While cleaning, make sure not to use a wet cloth or use water on any part of the unit, as this may cause a short circuit or electrical shock.

Using your AirDryer

1. Remove the unit from the box and take off any protective wrapping.
2. Dispose of all packaging in a safe manner
3. Place the AirDryer onto a level floor, ensuring that it is stable
4. Attach the four rubber feet provided to the base of the unit.
5. Place your Clothes Airer (Rack / Horse) on top of or over the AirDryer, again ensuring at all times that both the AirDryer and the clothes rack / horse are stable. (Fig 2)

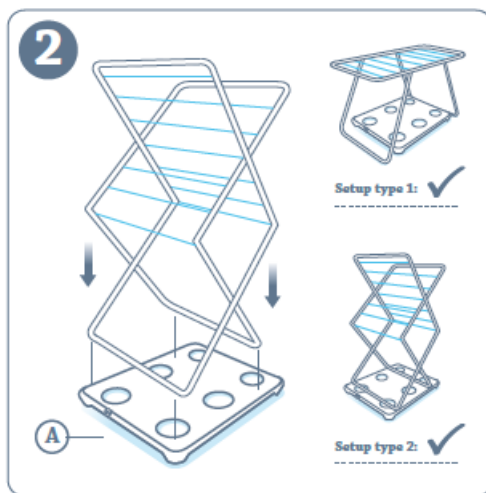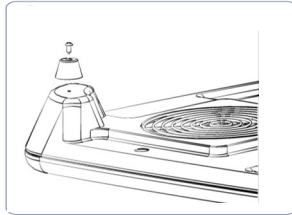

6. For best results place the heavier garments, such as jeans, jumpers etc. on the lower rungs, directly over a Fan outlet. Place lighter garments to the outside and upper rungs. Spread out the garments as much as possible to allow the Air to circulate through.
7. Plug the power supply provided with the AirDryer in to the AirDryer (Fig 3)
8. Plug the power supply into your wall socket.

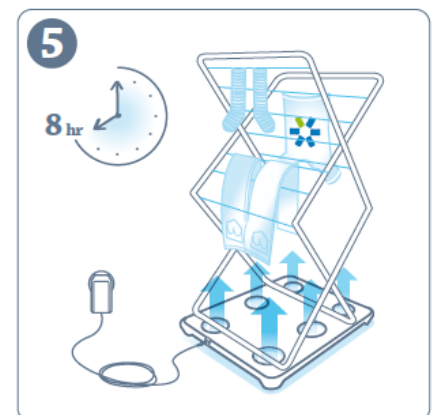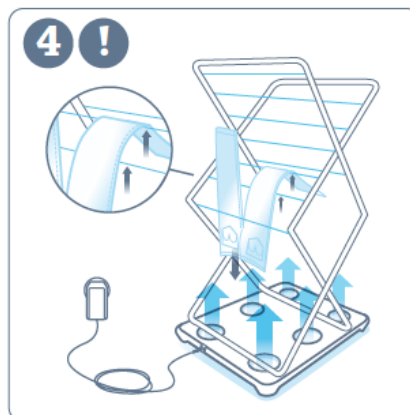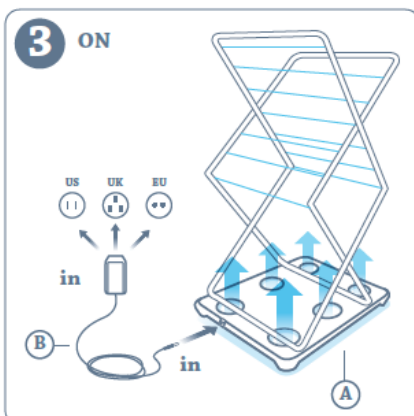

9. You are now drying your laundry.
10. When you are finished drying your laundry we recommend that you always unplug the power supply from your wall socket first and then remove the power cable from the AirDryer unit.

How long does it take to Dry the Laundry

Drying times vary depending on a number of factors. The Type of fabric in the garment, the Spin Speed of the washing machine, the temperature of the air in the room.

For best results:

1. All machine washed items must undergo a full spin cycle to remove excess water.
2. For hand washed items, remove as much surplus water as possible before using the AirDryer.
3. Do not place drip dry laundry directly over the AirDryer,
4. The AirDryer is more efficient when used in a well-ventilated room, the warmer the air temperature, the quicker the drying time.
5. You do not require additional heating when operating the appliance.
6. Place heavy garments on rungs directly over the fan outlets, without causing ob-

Garment type	Drying times (approx.)
Shirts	3 hrs -5 hrs
Jeans	6 hrs—8 hrs
Woolen Jumper	10 hrs
Underwear	6 hrs

struction to the Airflow.

Cleaning Your AirDryer

1. Always disconnect the appliance from the mains supply before cleaning.
2. Clean the outside of the appliance by wiping with damp cloth and buff with a dry cloth.
3. Do not use any detergents/solvents or chemical agents to clean the appliance .

Hints before returning the appliance:

1. Is your household socket working properly?
2. Are all wall socket switches in the "ON" position?
3. Ensure that the plug is firmly in the socket and switched on.
4. Ensure all fans are running and without any obstructions

Child Safety

Do not allow children to play with any part of the packaging, dispose of all packaging with due regard to safety and the environment. Do not allow children to tamper with or play with the appliance.







At the end of appliance life

1. The crossed out wheelie bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for re-cycling.
2. Any appliance or defective part shall become the Company's property.
3. This appliance meets the electromagnetic compatibility requirements specified in EN 55104/95 with regard to interference with radio and TV set

After Sales Service

1. Your product is guaranteed for one year from the date of purchase. We undertake to exchange or repair free of charge within this period, any part found to be defective due to manufacturing fault.
2. Should you require after sales service, please get in touch with the supplier through whom you purchased the appliance or your nearest Dimplex Service Agent.
3. Please do not initially return a faulty appliance or part of an appliance to us as this may result in transit damage and/or delay in providing service. Let us know your difficulty, quoting the model number and series letter of the appliance. We will then take the appropriate action.


Quick Start Guide

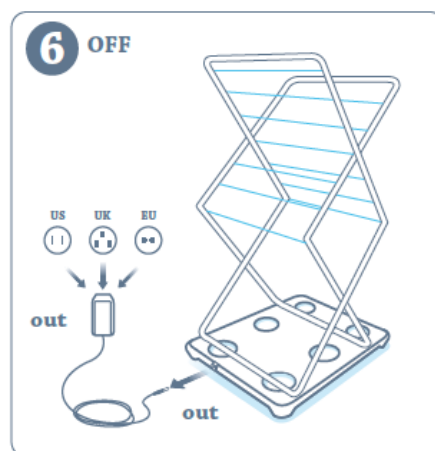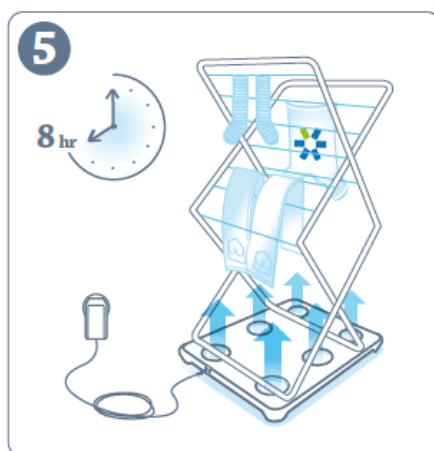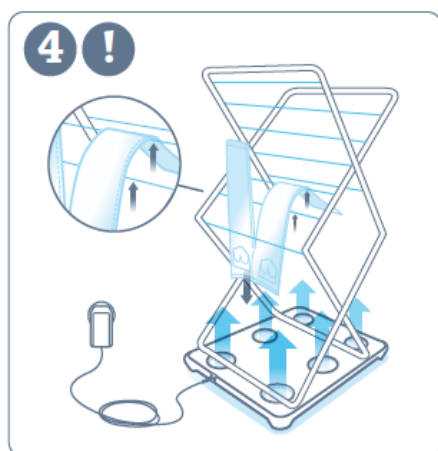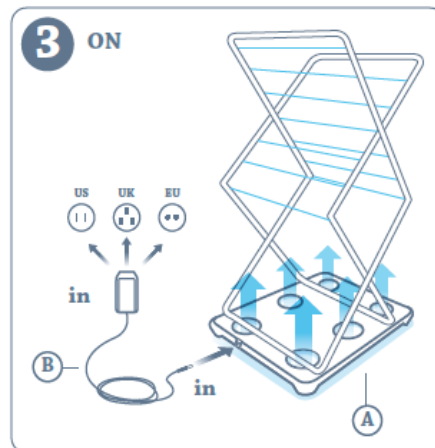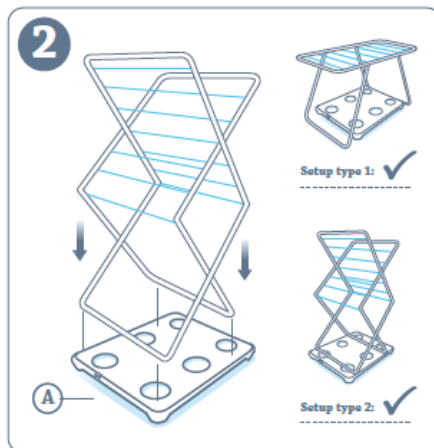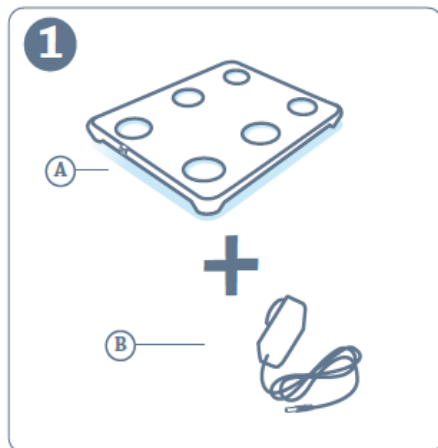

Dimplex

Dimpco
Airport Road
Cloghran
Co. Dublin

Tel: 01 8428222
Fax: 01 8428091
Email: service@dimpco.ie

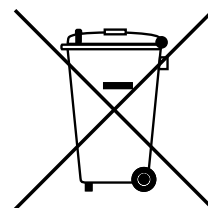

Ref: IBDAD25 Rev A